


BFA is efficient tool for easy alignment of bare fiber itself (SM, MM) to be measured optical fiber cable length, loss and so on with OTDR, Optical Power Meter, VFL.

## Parts Description

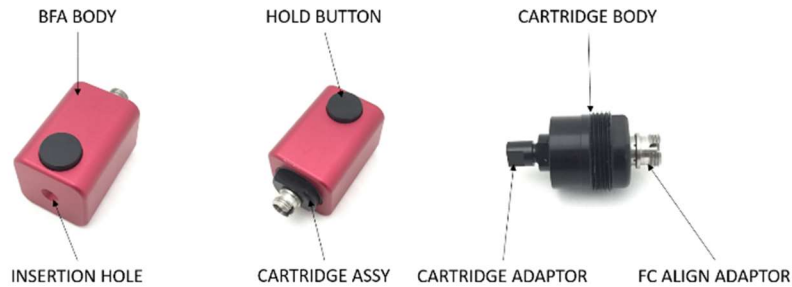


## Cartridge Replacement

Cartridge can use more than 500 times. Do the following in turn in case of cartridge will need to replace

1. Remove protection cover on both side of new cartridge
2. Connect cartridge adaptor and FC align adaptor on both side of cartridge
3. Connect cartridge with main body



## BFA Operation

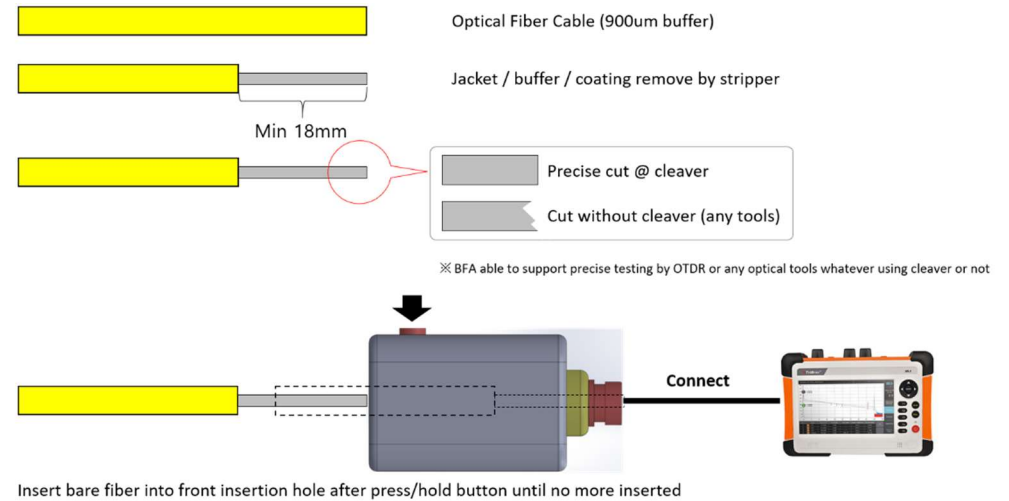

## Troubleshooting and recovery

Do the following in turn in case of bare fiber broken/cut inside of aligner.

1. Separate cartridge from the aligner main body.
2. Separate FC aligner adaptor from cartridge and remove bare fiber, if any.
3. Separate cartridge adaptor from cartridge and remove bare fiber, if any.

In case of broken bare fiber inside of aligner, use remover and wire come with the package.

